

# Cleaning Drum Lenses Can Quickly Improve Quality.

Print quality issues such as lines and streaks can easily be eliminated by following these easy steps. These steps will help you improve the print quality of your Xerox printer. All the tools needed are built-into the device, more specifically the drums. All you need to do is to pull and push back a small lever cleaning the print head. This step is applicable for all the units in the Xerox Workcenter 7800 series including the Xerox WorkCentre 7830, 7835, 7845, 7855 and the new “i” series Xerox WorkCentre 7830i, 7835i, 7845i and 7855i. Also these steps work for the current Xerox Altalink Series of multi-function copiers that are available for lease or purchase. This Altalink Line includes both B and C 8030, 8035, 8045, 8055, 8070 Printers and Multifunctionals.

The printer has been built with four print-head lenses. On print head for each of the drums. Clean all lenses as described in the following procedure.

**CAUTION: Do not perform this procedure when the printer is copying or printing.**


1. Open the Front Cover of the printer.



2. Turn the orange lever to the left



3. Pull the Drum Cartridge Cover down until it clicks into the open position.

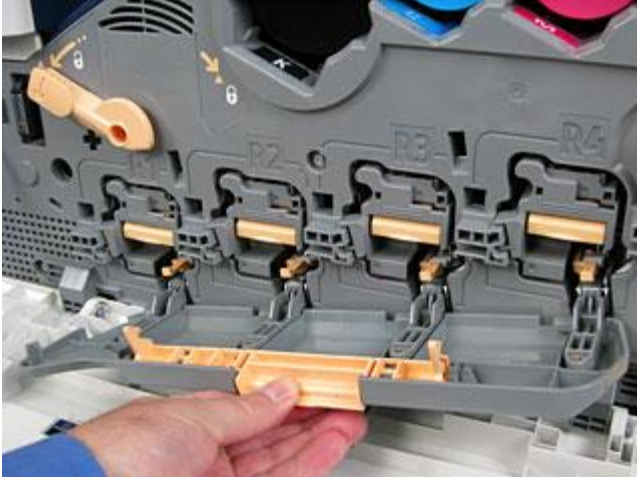

4. Each of the four printheads has its own cleaning tool. Slowly pull the printhead lens cleaner out until the three dots are visible.



**NOTE:** The printhead lens cleaner does not detach from the printer.



5. Slowly push the printhead lens cleaner back into the printhead until it stops.
6. Repeat steps 4 and 5 for each printhead.
7. Close the Drum Cartridge Cover



8. Turn the orange lever to the right to return it to the locked position.



9. Close the Front Cover.